

# DISHWASHER INSTRUCTIONS

## CONTROL PANEL: LEFT → RIGHT:



**ON/OFF → SP** (*special programme*) → **DISPLAY** → **P** (*standard programme*) → **START**

### PREPARE (18 minutes):

1. Door must be closed. Find **---** on the **DISPLAY**.
2. Press **ON/OFF** – Then leave it (ignore any intermittent flashing of 't' and 'b' and **PR 1**)  
Ready when **ALL 3 GREEN LIGHTS** glow on the **left side** of the **DISPLAY**.

### WASH (1-2 minutes):

3. Load machine using trays provided. Ideally 1 per wash
4. Press **P** (repeatedly) for desired *standard programme* eg. **PR 1**

**OR**

Press **SP** (repeatedly) for desired *special programme* eg. **GLAS**

5. Press **START** to **wash**

Once finished: Find the word **end** on the **DISPLAY** (for 20 secs) – it then reverts back to the *programme* you selected and **ALL 3 GREEN LIGHTS** glow on the **left side** of the **DISPLAY**

6. Remove dishes and stow away. Repeat steps 3-6.

After you have finished all trays you must clean and drain the machine.....

### DRAIN (2 ½ minutes):

7. Press **P** (repeatedly) and select **dr** (*drain programme*). Door must be closed.
8. Press **START** to **drain**
9. Whilst draining, remove the grey plastic filters in the bottom of the machine. Wash and replace.

Once finished find **---** on the display again.

10. Leave the door slightly open to allow steam to escape. Leave the mains switch on.